



REACT MOBILE®

PRODUCT BRIEFS

An Employee Safety Solution

REACT MOBILE®

Stand-Alone LTE Panic Button



The React Mobile® Stand-Alone LTE panic button is an all-in-one solution capable of protecting employees both on and off property without the need for a tethered smart device.

The stand-alone panic button provides a robust, simple wearable device that staff can access quickly and discreetly to call for help when assistance is needed. Unlike our Bluetooth panic button, it does not need a paired mobile device and is instead capable of connecting to the available cellular network.

The panic button device consists of a small slim form factor, running on internal firmware. This device is capable of longevity (life) expectations that far exceed standard panic button devices.

Key Features

- Latest generation ARM Cortex M4 processor
- Single-button interface with positive click feedback in a form factor that conforms to the hand
- Housing is military-grade ABS composite (IP53 resistant to water and dust intrusion) with low propagation properties to allow the BLE to function at peak performance efficiency
- Power: Always on
- Drop-resistant up to 10 meters

REACT MOBILE®

Stand-Alone LTE Panic Button

Key Features (cont.)

- Tricolor pipe RGB LED
- Field upgradeable firmware via OAD/OTA firmware updates
- Reverse compatible to all previous versions of our applications
- Works across the broad spectrum of 900 - 2000 MHz. Connects via LTE-CAT M1, NB-IOT, 2G, 3G & 4G
- Next-generation rechargeable battery technology that provides rapid charging and battery life of 6 months between charges
- Dimensions: 2.14" wide x 2.24" tall



REACT MOBILE®: EMPLOYEE SAFETY SOLUTION

Prioritize your people's safety with React Mobile® from PDC. This precise, location-based alert system is built for organizations to allow for rapid emergency response. The wireless solution is quick and easy to implement, with little disruption to your facility. This panic button technology is a must have in healthcare and education settings.

Contact Us Today
for More Information

HEALTHCARE	800 435 4242	pdchealthcare.com
EDUCATION	800 233 0298	IDenticard.com

REACT MOBILE®

BLE 5.0 Beacon

The BLE beacon is a discreet, easy to conceal device that allows our safety platform to deliver precise room level location accuracy indoors in multi-story buildings.

Our system provides precise location information within a multi-story building. When one of our panic buttons activates an alert, the device identifies the closest BLE beacon. It reports this precise room number location information along with GPS coordinates to our safety platform. This information updates in real time throughout an alert, providing up to the minute location information.

The beacon consists of a small slim form factor, running on internal firmware. It was designed for indoor location-based geo-positioning. This device is capable of longevity (life) expectations that far exceed standard Bluetooth beacon devices.

This beacon is capable of advertising at -0dbM, which yields an effective range of approximately 100 feet. The device consists of an ABS housing and PCBA mounted into an internal structure.



REACT MOBILE®

BLE 5.0 Beacon

Key Features

- Nordic NRF semiconductor-based based microchip
- Field upgradeable with OAD/OTA firmware updates
- A broad range, exceeding 100 feet
- Readily sourced and procurable
- Dimensions: 2"(H) x 2.23"(W) x 0.6"(D)
- IP53 standard and is resistant to water and dust intrusion
- Hassle-free install, with preinstalled adhesive backing
- Battery power by 2 AAA cells. Extensive battery life of up to 5 years.



REACT MOBILE®: EMPLOYEE SAFETY SOLUTION


Prioritize your people's safety with React Mobile® from PDC. This precise, location-based alert system is built for organizations to allow for rapid emergency response. The wireless solution is quick and easy to implement, with little disruption to your facility. This panic button technology is a must have in healthcare and education settings.

Contact Us Today
for More Information

HEALTHCARE	800 435 4242	pdchealthcare.com
EDUCATION	800 233 0298	IDenticard.com

REACT MOBILE®

Dispatch Center Software

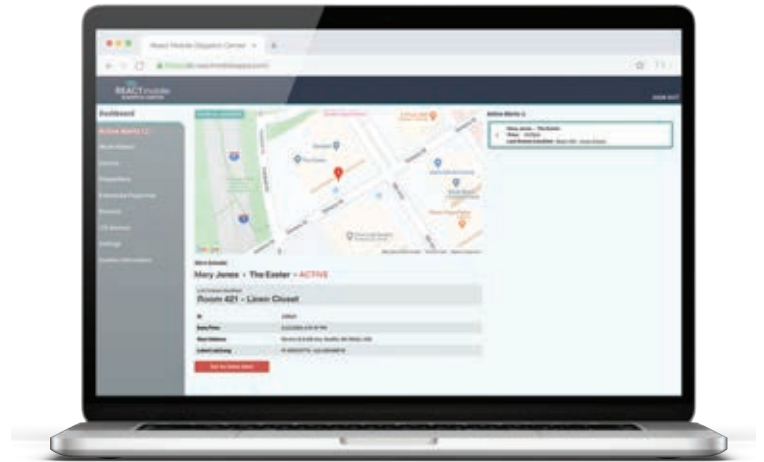

The React Mobile® Dispatch Center software is the primary customer portal for administrative control and alert monitoring of our safety platform.

The Dispatch Center is a browser-based software that can be accessed to view, manage, and configure alerts and panic button hardware in any web browser. It serves as the central administrative control for the React Mobile safety platform.


This portal is capable of receiving emergency alerts and displaying relevant alert information. When an alert is activated, an audible alarm on the computer speakers will sound, and also display an operating system-level notification.

Key Features

- Browser-based software, no need to download any application to a PC
- Alert history logging, available to export into a CSV file
- View active and inactive alert information
- Disable active alerts
- Add/Edit alert notification recipient lists (email and SMS alert notification types)
- View the battery life of devices

REACT MOBILE®

Dispatch Center Software

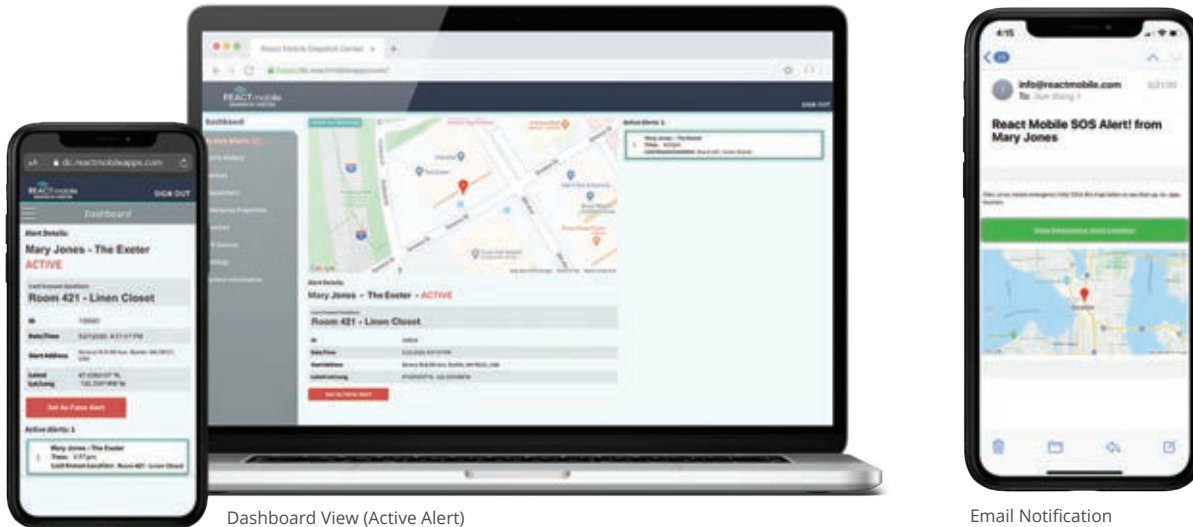

Dashboard View (Active Alert)

Email Notification



SMS Notification (Link View)

REACT MOBILE®: EMPLOYEE SAFETY SOLUTION

Prioritize your people's safety with React Mobile® from PDC. This precise, location-based alert system is built for organizations to allow for rapid emergency response. The wireless solution is quick and easy to implement, with little disruption to your facility. This panic button technology is a must have in healthcare and education settings.

Contact Us Today
for More Information

HEALTHCARE	800 435 4242	pdchealthcare.com
EDUCATION	800 233 0298	IDenticard.com

REACT MOBILE®

Sidekick Bluetooth 5.0 Panic Button

The React Mobile® Sidekick Bluetooth panic button pairs with mobile devices to provide an elegant safety solution for the mobile workforce.

Our Bluetooth panic button provides a robust, simple wearable device that staff can access quickly and discreetly to call for help when assistance is needed. It is compatible with both iOS® and Android™ mobile devices and pairs via Bluetooth with the React Mobile® app running on these devices.

The panic button consists of a small slim form factor, running on internal firmware. This device is capable of longevity (life) expectations that far exceed standard Bluetooth devices.

Key Features

- Connects via BLE to a smart device
- Shock-resistant
- CR 2025 coin cell battery
- Compatible with Apple® or Android smart devices
- IP 67/68, dust-tight, immersion up to 1 meter depth
- Dimensions: 1.14" wide x 1.96" tall



REACT MOBILE®

Sidekick Bluetooth 5.0 Panic Button



REACT MOBILE®: EMPLOYEE SAFETY SOLUTION

Prioritize your people's safety with React Mobile® from PDC. This precise, location-based alert system is built for organizations to allow for rapid emergency response. The wireless solution is quick and easy to implement, with little disruption to your facility. This panic button technology is a must have in healthcare and education settings.

Contact Us Today
for More Information

HEALTHCARE	800 435 4242	pdhealthcare.com
EDUCATION	800 233 0298	IDenticard.com

REACT MOBILE®

Mobile App



Our Mobile App is used in conjunction with our Bluetooth panic button to provide workers with a seamless safety solution capable of integrating with smart devices and workday management software.


When paired with our Bluetooth safety button, this integrated technology provides a robust and low-cost option for deployment of a staff safety solution. The React Mobile® safety platform is capable of integrating with existing devices and systems, such as workforce optimization platforms, to improve the safety of the workforce.

REACT MOBILE®

Mobile App

Key Features

- Compatible with Apple® or Android™ smart devices
- Pairs with the React Mobile® Bluetooth Safety Panic Button
- Capable of operating as a stand alone solution or integrating with existing digital platforms

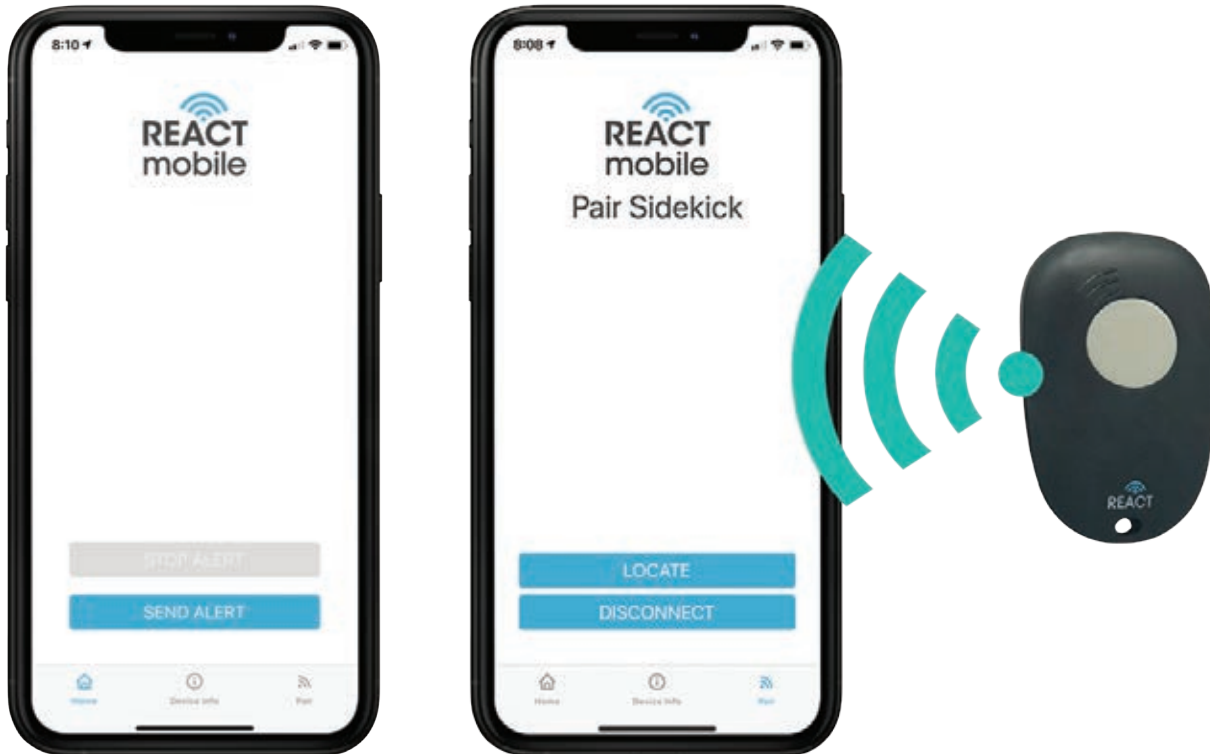

REACT MOBILE®: EMPLOYEE SAFETY SOLUTION

Prioritize your people's safety with React Mobile® from PDC. This precise, location-based alert system is built for organizations to allow for rapid emergency response. The wireless solution is quick and easy to implement, with little disruption to your facility. This panic button technology is a must have in healthcare and education settings.

Contact Us Today
for More Information

HEALTHCARE	800 435 4242	pdchealthcare.com
EDUCATION	800 233 0298	Identicard.com